

# TABLET PC

## Quick Start Guide

**zoostorm SL8 mini2**



[Note]: The appearance, color, features, and pictures in the manual are for reference only;  
The company reserves the right to update the products and the manual without prior notice.


## Safety Instructions

For safe and effective use of the SL8 mini 2 Tablet PC, you should read the safety precautions below:

- Use a soft dry lint free cloth to clean the tablet PC.
- Keep the tablet PC away from heat, cold, moisture and dust.
- Don't spill any liquid onto the tablet PC or leave it in direct sunlight.
- Don't use liquid or chemical cleaners to wipe the tablet PC.
- Don't insert any object into the tablet PC's air vents or other slots.
- Don't place heavy objects on the tablet PC.
- Don't disassemble the tablet PC, let a qualified professional service your tablet PC. [Note] : this may affect your warranty.
- Don't drop the unit or leave the item covered whilst charging. To charge the Tablet PC safely, make sure there is adequate ventilation.
- Don't apply excessive pressure on any of the cables as damage to the sockets may occur.

## Home Screen Use Instructions

Press Power for 3 seconds, after booting picture enters the home screen as below:

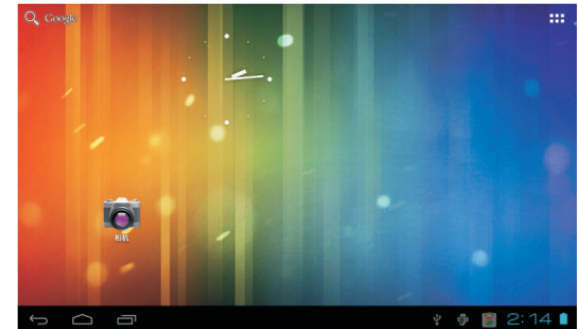

- ☰ Application: touch here to go to Application Interface where all the applications are shown.
- ⬅ Back: touch and return to menu.
- 🏠 Home: touch and return to home screen.
- 📁 Applications list: touch here to display the most recent applications used.

[Note] : Google search; top left of the screen to browse google.

## Part Names and Functions:



1	Camera	Taking pictures or recording video
2	Built-in microphone	Used for video Conference,dubbing and simple recording
3	DC-In Jack	Connect to the DC power supply
4	Mini-HDMI Port	External mini high-definition Multimedia monitor
5	Audio output Interface	Audio output,connect to headphone
6	Micro-USB Port	Connect Micro-USB device
7	Micro-SD	External Micro-SD card to extend storage
8	Cut power switch Emergency reset	The soft reset option; used only if the tablet PC cannot be turned off using the power button.
9	Built-in speaker	Sound output
10	Power button	Press for more than 3 seconds to turn on/off; press once for screensaver, press again to wake it up
11	Volume button	Increase the volume
12	Volume button	Decrease the volume

\*Not 3G Model Enabled.